# DMX512 DECODER USER MANUAL



#### I. Specifications

Working temperature: -20-60° C Supply voltage: DV 12-24V Product size: L166xW67xH41 mm Package size: L185xW85xH59 mm

Net weight: 340g Gross weight: 380g

Output: Three CMOS drain-open output Connecting Mode: Common anode Max output current: 4 A each color

#### II: Function

- 1. Each DMX common controller occupied 3 DMX addresses. Each coding switch can set address code from 1 to 9, 1 is the lowest, and 9 is the highest. A combination of 511 address codes are possible. DMX original address code is the total value of the coding switch value from 1 to 9. Dial the coding switch upward (ON is set to 1) to set the bit value (by default the bit value is 0). For example: if you want to set 37 as the address code, you can only dial down the first, the third, and the sixth code switch, the total value of coding switch from 1 to 9 is 32+4+1. The default address code of DMX512 is 37.
- 2. DMX signal can be received when coding switch FUN (10) = OFF (ON is set to 0)
- 3. When the coding switch FUN (10) is on, its function is as follows:


CODING SWITCH	FUNCTION
Switch 1-9 is OFF	black
Switch 1 = ON	red
Switch 2 = ON	green
Switch 3 = ON	blue
Switch 4 = ON	yellow
Switch 5 = ON	purple
Switch 6 = ON	cyan
Switch 7 = ON	white
Switch 8 = ON	seven-color jumpy changing (8 steps speed)
Switch 9 = ON	seven-color gradual changing (8 step speed)

4. If the coding switch is 8 or 9, speed option is 1 to 7. There are 8 steps total:

Switch 1-7 is OFF	0 step
Switch 1 = ON	1 steps
Switch 2 = ON	2 steps
Switch 3 = ON	3 steps
Switch 4 = ON	4 steps
Switch 5 = ON	5 steps
Switch 6 = ON	6 steps
Switch 7 = ON	7 steps (the greatest speed)


5. There can be several switches ON at the same time.

## **III: Interface Diagram**

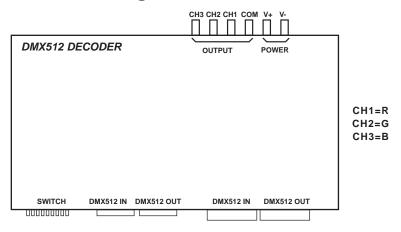



#### **IV. Safety Information**

- 1. Input voltage specifications for this controller should be followed strictly to avoid accidents or damage to the device.
- 2. Never connect two wires directly to avoid circuit shorting.
- 3. Lead wire should be connected according to the color diagram.
- 4. The warranty is valid for one year we guarantee replacement or repairing free of charge. Warranty may be voided if product is misused or damage is artificially induced.

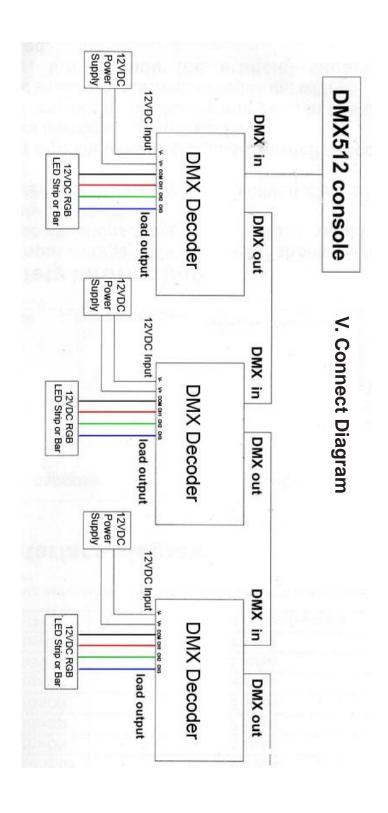


# **Dimensional Drawing**

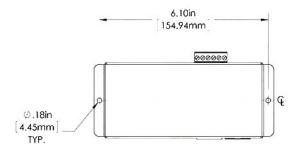

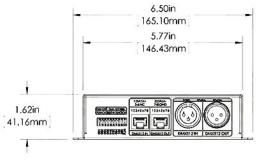





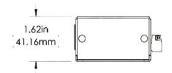

## Controller

